



Stand up side panels at 90-degrees and buckle Together with latches on top. Note Walls A,B,C,D marked from left forward wall, around.



Latches on top of each panel  
Snap together to hold panels while  
You are assembling the unit.  
**Each panel is marked in pencil drawing on the inside-top so you can see which one goes where.**



You stand up each side  
Snap together to hold panels while  
One by one all the way around  
the floor until it's fully set up.



Once fully assembled your Decon Unit looks like this.



The Floor is in two pieces  
With writing on the bottom to  
show front and back.



The Two pieces are designed with  
slats that inter-lock. A grooved rail  
is on either side.



The Front is separated into Two pieces. One has the door, the other has the timer/control.



The "Header" board is screwed on from the inside. The holes are pre-drilled.



The Header Board looks like this.



There are pencil marks on the top that show how to line it up so that the door will hang squarely.



The Roof for this unit is in Two Pieces. Each is marked Front or Back (as you face the door).

They are lifted overhead and rested on the wooden ceiling klets mounted inside.



The Front side has the grey electrical junction box and light, and the Back side has nothing..



The Front ceiling piece has a "notch" to allow the cables from the control panel to slide up and onto the roof for connection. All other cables should be flung up and over the walls in the corner to allow the roof to fit on.



Insert thin strip of wood with 2 pre-drilled holes into door threshold, and screw into place. This will join the 2 pieces into 1.



There are "L" brackets above and below each heater. Screw the small silver screws into these in order to strengthen wall connections.



Also Screw small silver screws into heaters.



The Heat protection Screens are mounted with the holes Upward to the top. Screw the screen onto the wall with only one inch clearance on the bottom, and maximum clearance on top, to allow heat dispersion.




Flush mounted heaters on the back wall have the flush-mounted screens.



Screw all wall connectors together inside.



The long thin pieces screw onto the Back and Front of the back wall to hold the two side panels together. They are marked UP and DOWN on the under side.

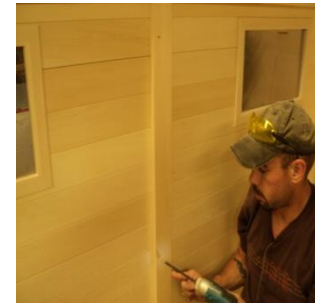



## Chemical Decon Unit - installation guide. pg4



Drill screws into pre-drilled holes along edges of ceiling, AND in the center to connect the two pieces together



All cords connect to Grey Box on rooftop. 6 Heaters plug into one-side. Controller cables are different and plug in next to each other on the opposite side.



Light is marked with Red tape on each side.



Now Your  
Chemical Detox  
Unit is ready to  
plug in and use!